



3.10.24-rt20 on i.MX28 HZ=100, NO_HZ + NO_HZ_IDLE

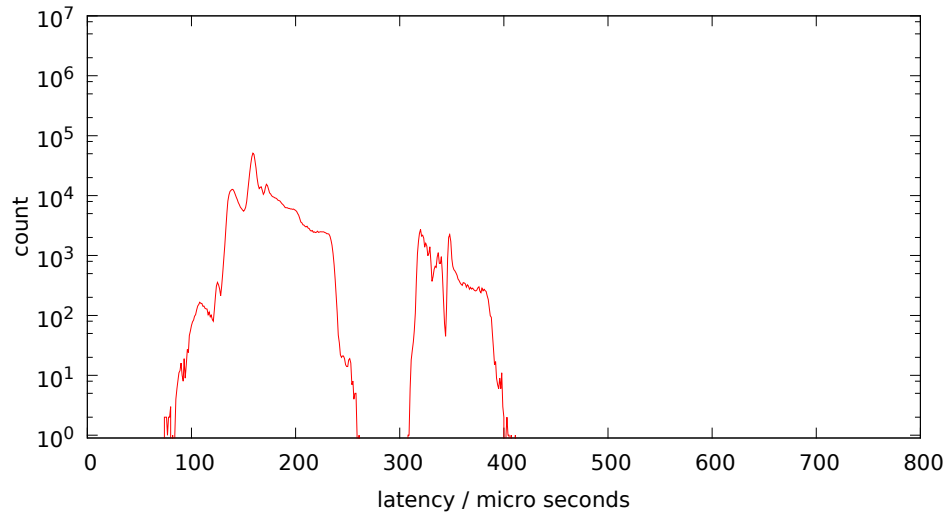

3.10.27-rt25 on i.MX28 HZ=100, HZ_PERIODIC + !NO_HZ

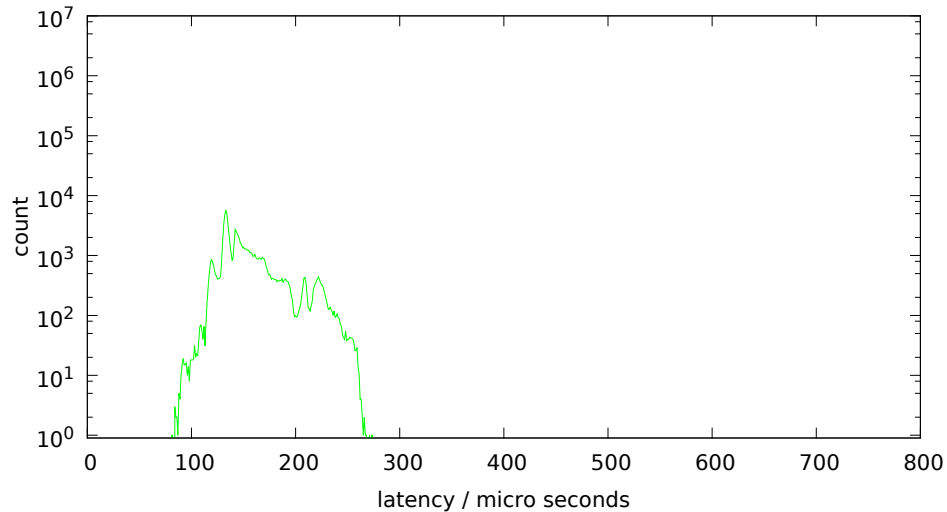

3.10.27-rt25 on i.MX28 HZ=500, HZ_PERIODIC + !NO_HZ

